


## EL DEVICE REMOVAL

To access the internal mechanism of the device you will have to follow the step by step process below.


Firstly remove the latch cover to give access to the fixing screws below:

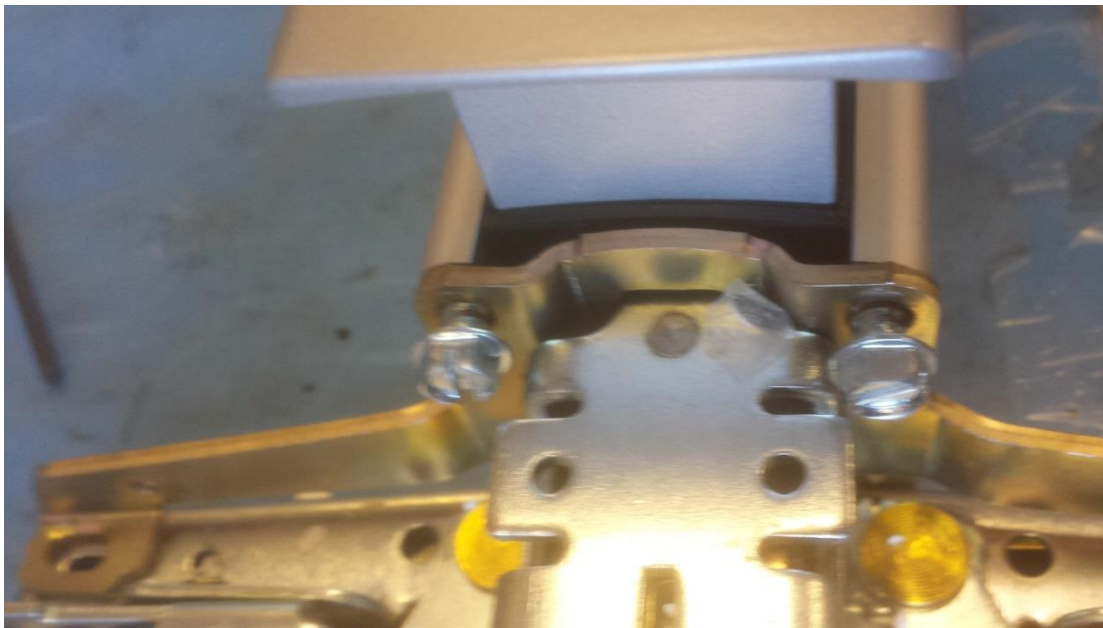

Remove these and any screws fixing the latch and body to the door and remove the clip to allow the back-plate to be removed from the aluminium extruded body.

Now slide out the back plate taking care not to damage the black plastic guides on both sides of the push pad:



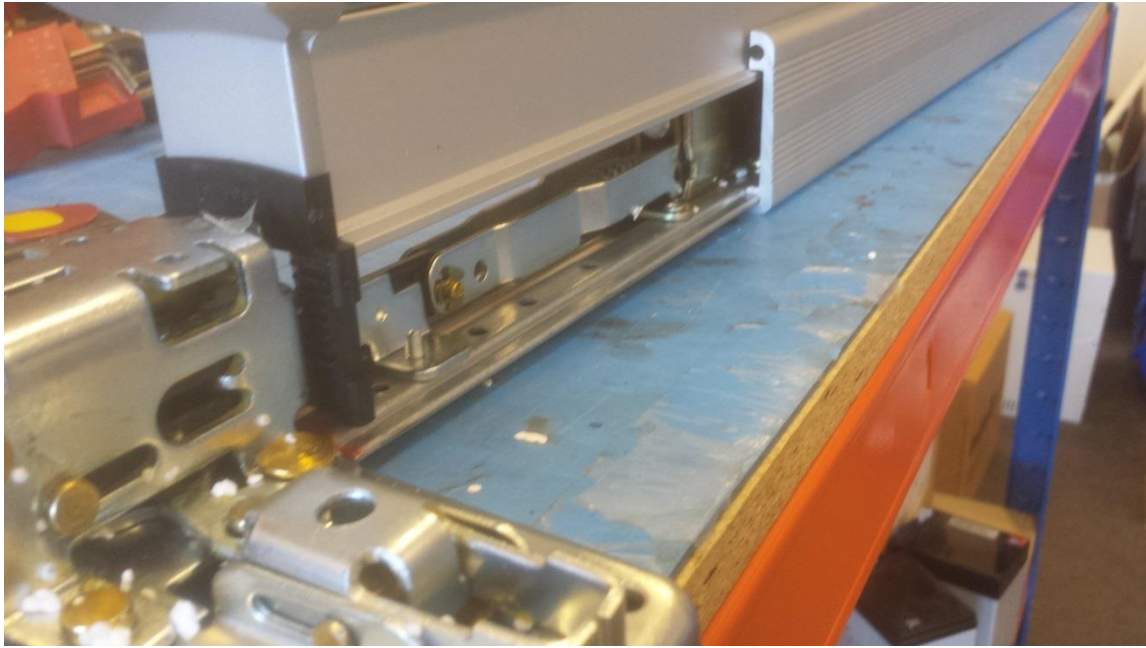

Once the back-plate is free from the housing, lift both plastic guides and support them while holding the push bar and remove it. A sideward and upward movement is required here as the locators have cut-outs to the side.

You now have access to the base plate for adjustment.



Reinstallation is a reverse of this taking care to lift the plastic guides and not damage them while you slide the back-plate into the aluminium extruded housing.