



# Assembly of Lock Case Parts

## Turn Hub Spring and Transfer Lever

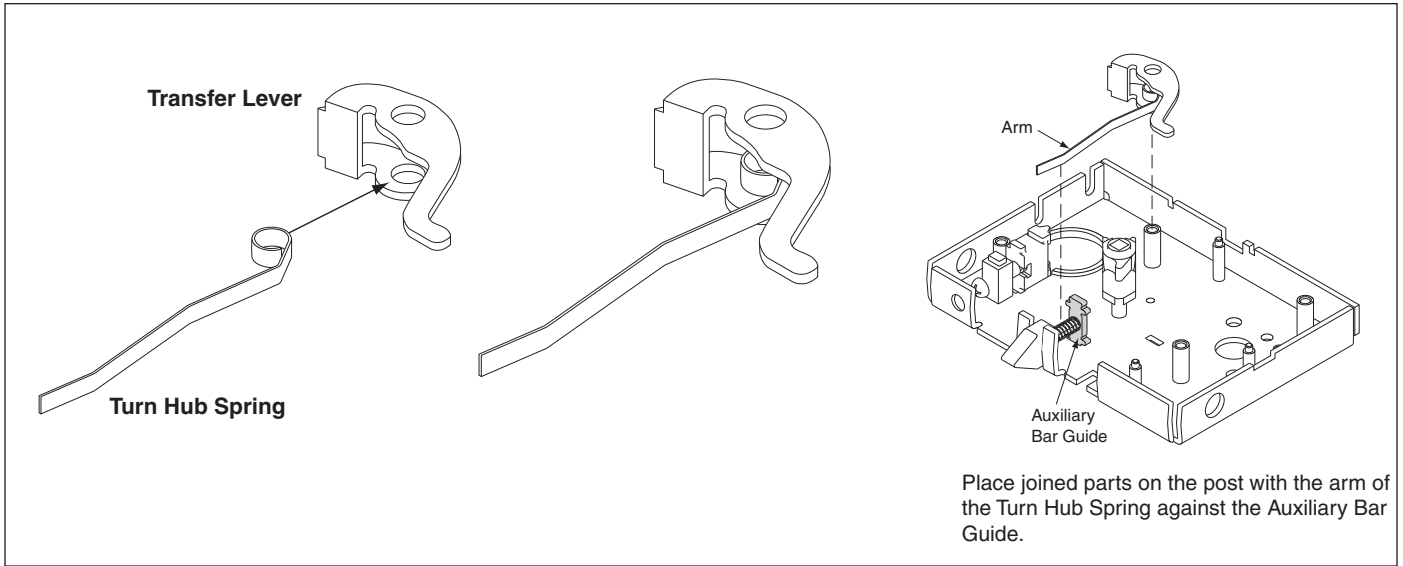


## Locking Catch / Retractor Catch and Locking Link

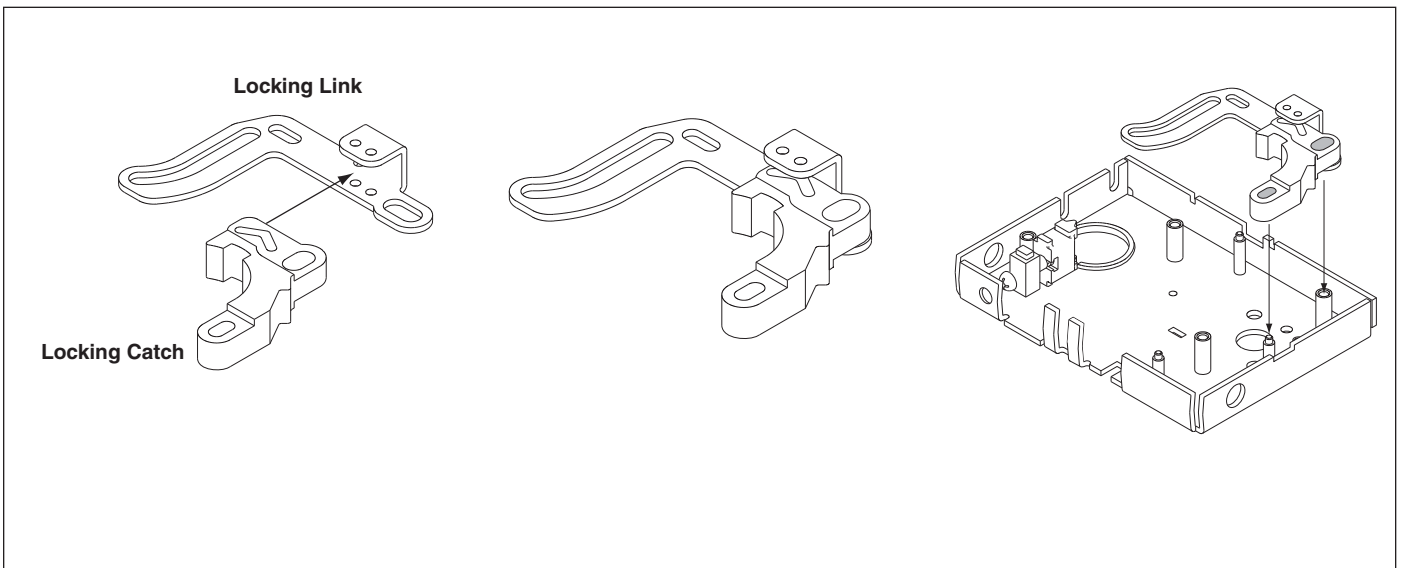

## Assembly of Lock Case Parts

### L FUNCTIONS ONLY Fire Door Fuse, Fire Door Catch and Hub Spring

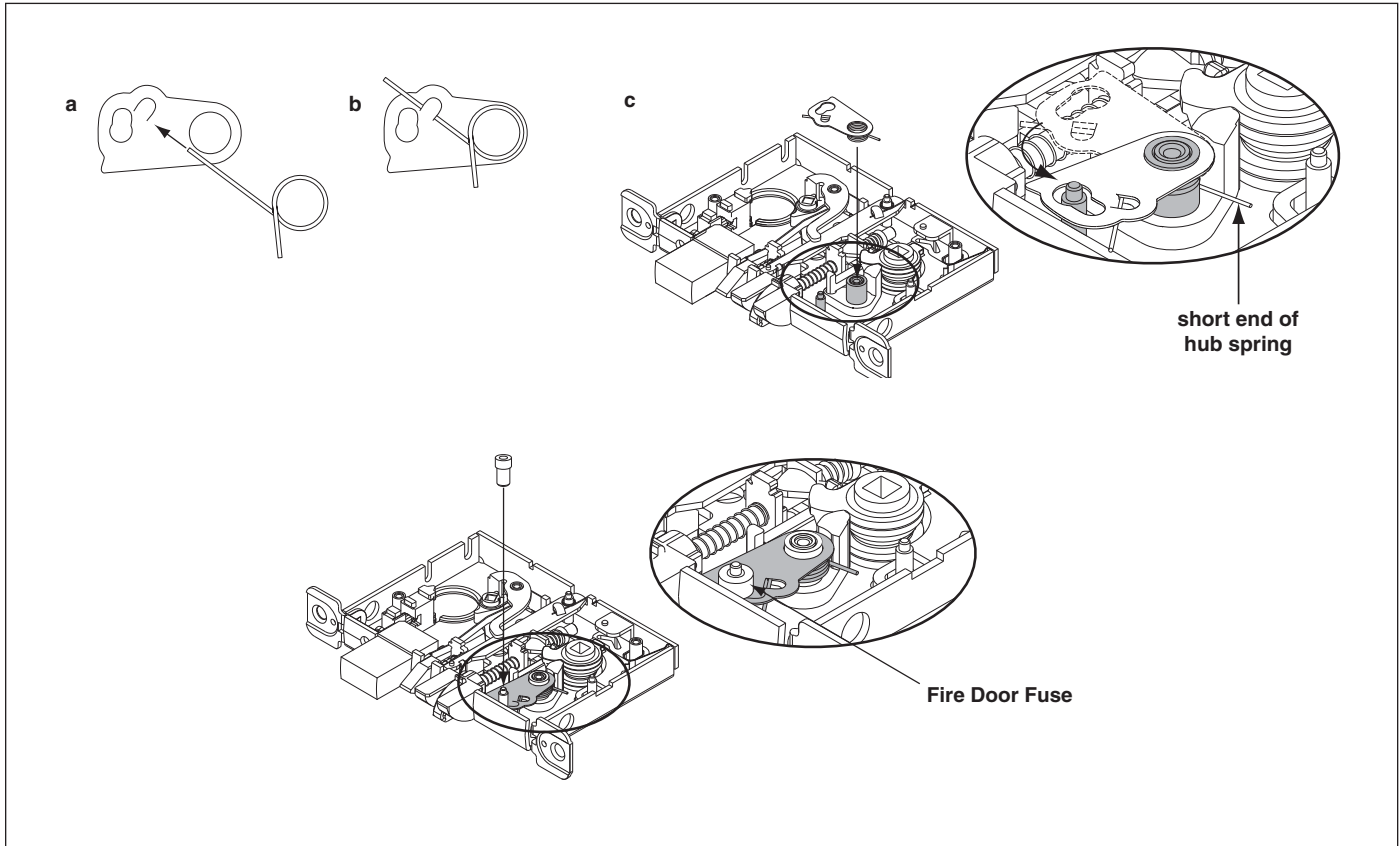

### LV FUNCTIONS ONLY Fire Door Fuse, Fire Door Catch and Hub Spring

