

## PS01.N 12Vdc 2A Power Supply - Installation Instructions

INSTALLATION WARNING – This equipment MUST BE EARTHED and supplied from a switched fused 3A spur on 30mA RCD mains protection.

The enclosure must be fixed internally on a vertical flat surface at a maximum ambient temperature of 45°C (unit weighs 4.3kg w/out battery) in a well ventilated area. This power supply must be installed in accordance with the Wiring Regulations BS7671. Installation by qualified personnel only, precluding use by persons (including children) with reduced physical, sensory/mental capabilities and those with a lack of experience and knowledge.

230V 50Hz 1A supply

### **WARNING - DISCONNECT FROM MAINS SUPPLY BEFORE CARRYING OUT ANY WORK**

If the supply cord is damaged, it must be replaced by the manufacturer, their service agent or similarly qualified persons in order to avoid a hazard.

#### **Features:**

- Two stage current protection
- Short circuit protection
- Thermal overload protection
- Constant voltage regulation for battery charging
- Mains failure or low battery voltage warning, user selectable
- Relay interface to building management system
- Enclosure door 3 LED status indicators
- PCB mounted engineering status LED indicators, show:
  - Over current
  - Building management system WNO WNC output
- Battery management electronics providing:
  - Low voltage trip to disconnect battery and extend battery life
  - Reverse battery polarity protection

#### **First stage current protection**

If the load exceeds the power supply current rating, an electronic sensor detects this overload, folds the voltage back to 11.5 volts and provides current limiting, this is indicated by the red overload LED on the circuit board.

#### **Second stage current protection**

A short circuit or severe overload will shut down the regulator and output voltage will be zero until the fault is removed.

#### **Battery management (if battery fitted)**

Under normal conditions, the battery floats at 13.8 Volts. If the mains power fails the battery takes the load. Eventually the voltage will drop to 10.5 Volts and a relay disconnects the battery. This is reset automatically once the mains has been re-energized. This feature extends battery life by preventing deep discharging and prevents equipment malfunction.

#### **User selectable warning voltage free relay contacts**

The electronic voltage detection circuit is configured by selecting a link switch on the PCB. The relay will trigger as set: **FR** – Field relay, **MF** - Mains failure or **LB** - Low battery 11.5 Volts.

#### **Field Relay – terminals +NO & +NC**

Terminals FR & FR (Field Relay) can be connected to a voltage push button, relay contact and/or access control system. Relay operation is indicated via the external yellow LED. If the field relay is used, the positive supply is from either +NC (normally closed) and/or +NO (normally open) depending on desired relay operation.





## Battery Functionality (Optional) – Only if Fitted

Switch off the mains power and connect the battery. Place the handbag link to MF (mains failure), switch on the mains power, then switch off. The power supply is now running on the battery. Note the green LED on the PCB will be off but the green LED on the front panel will be on. The relay contacts WNO to WNC will change over.

## Tests with the Load Connected - Battery not Connected (if Supplied)


With the load connected, switch on the mains supply. The following LEDs should be on: red and green on front panel, green on the PCB and yellow (if using relay FR). This indicates the test and the power supply loading is correct.

If only the red LED is illuminated, there is a short circuit with the load connected.

If the red and green LEDs on the front panel (and red (overload) LED on the PCB) are illuminated then the connected load has exceeded the power supply rated output and it must be reduced.

Front panel LED	PCB LED	Means
Red + Green	None	Normal operation
Red + Green + Yellow	None	Normal operation with field relay energized
Green only	Red if MFW*	Power supply on battery
Green + Yellow	Red if MFW*	Power supply on battery with field relay energized
Red only	None	Dead short on output
Red + Green	Red	Current rating exceeded

\* MFW – mains failure warning if configured

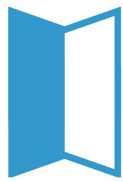

# relcross door controls®

distributors of **ANSI** grade & **CE** marked commercial door hardware

## Connections -

**Belden cable is not recommended. Use only multi-strand DC cable which is suitable for loads and locations.**

Positive and negative is supplied from +NS & 0V.

For building management and other relay connection options see diagrams below

