



931243-00

# 6114/6114DS

# VON DUPRIN®

Electric Strike, Single Door Rim Night Latch Application

Installation Instructions

Note: Check with factory for retrofit applications.

1. For lock or device preparation, see their directions.
2. Prepare frame for strike (see other side).
3. Wire strike (Figure 1). (Switches on 6114DS only.)

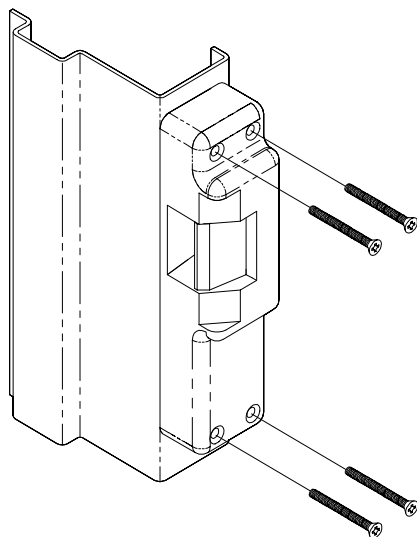
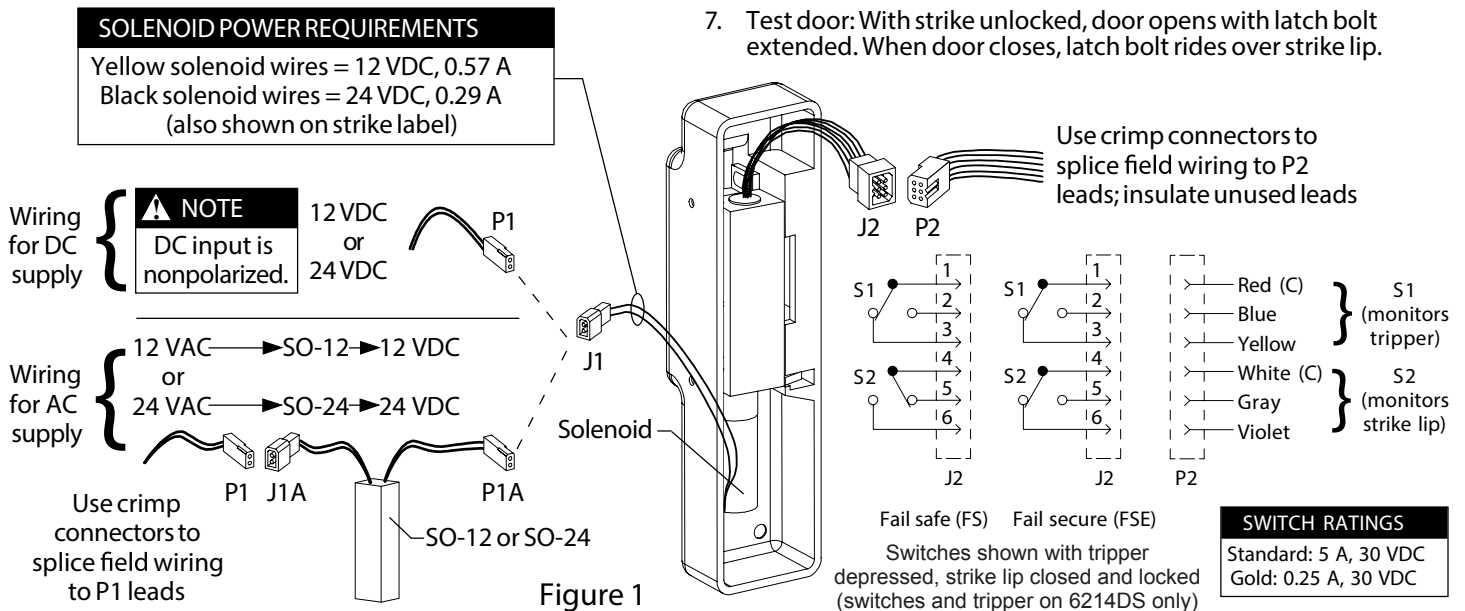


Figure 2


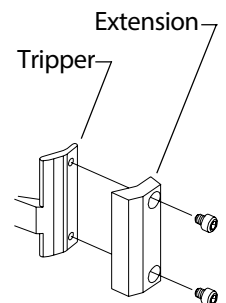


Figure 4



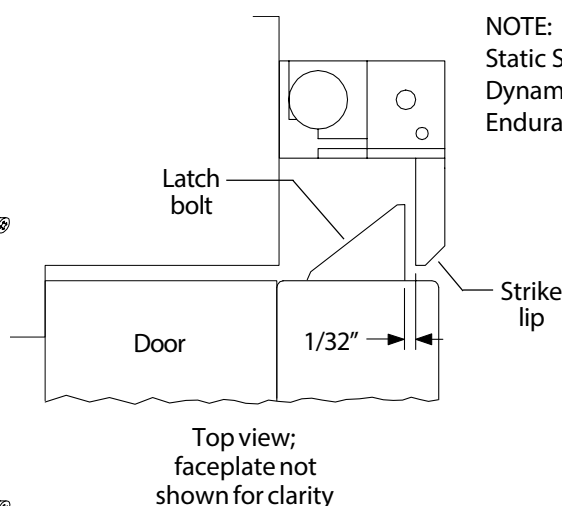