


Bottom Center Pivot





Installation Instructions

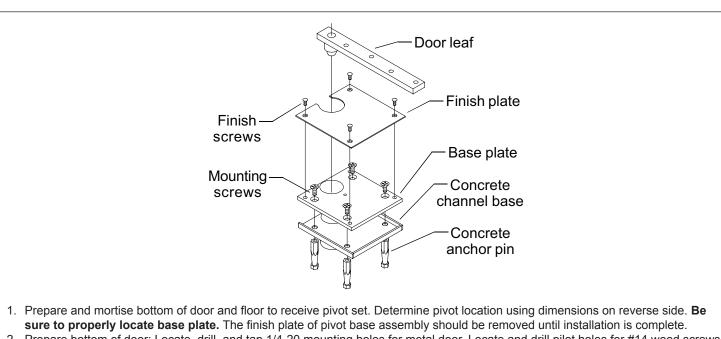

- Prepare bottom of door: Locate, drill, and tap 1/4-20 mounting holes for metal door. Locate and drill pilot holes for #14 wood screws for wood door. Mount door leaf in bottom of door with 1/4-20 x 3/4" FHMS or #14 FHWS screws provided.
- 3. Locate and prepare cutout in floor for pivot base. The pivot base assembly must be located so that the center line of top pivot point is plumb with center line of base pivot point. Secure pivot base:
  - a. Prepare compound that will be used to fill around pivot base (concrete, cement, grout, etc.).
  - b. Fill cutout with compound, leaving room for concrete channel base to fit flush with floor.
  - c. Set pivot base into cutout. Align base assembly so pivot point is in proper position.
  - d. Use a level to be sure pivot base assembly is level on all sides.
  - e. Secure in proper position until compound sets up completely. Once compound has set up, mounting screws can be removed, allowing removal or replacement of pivot base assembly.
- 4. Re-attach finish plate, then hang door.
- 5. If height adjustment is necessary for proper clearance, use shims between door bottom and pivot leaf to increase clearance. To decrease clearance, mortise in door must be made deeper.

## A CAUTION A

Improper pivot set installation can lead to personal injury or property damage. Follow all instructions carefully. For questions contact Technical Support at 01380 729600.

